

SWITCHMATIC & SWITCHMATIC 2

ZERO REGULATION

1. Check that the installation remain without pressure.
2. Press simultaneously the buttons ENTER and START PRESSURE till the screen show 0.0 flashing (Fig. 1).
3. Press Enter to validate.



Fig. 1

FULL SCALE

1. Check that the installation remain with pressure (Fig. 2).
2. Press simultaneously the buttons ENTER and STOP till the number flashes (Fig. 2).
3. Change the pressure with buttons ▼▲ to get the pressure wanted.
4. Press ENTER to validate.



Fig. 2