

Interface USB

Communication kit between the PC and the Speedmatic.

Allows software updating, data collection and optimization of the device operation. It is connected to the USB port of the PC on one side and in the other side to the JST connector on the control board Speedmatic. It includes driver and software application.

